

## 4.0 Assessment of Sampling Plans

VSP provides multiple displays for allowing you to assess a sampling plan. VSP calls the displays **Views**. You can view a representation of the sampling locations on the map entered into VSP, view a graph of the performance of the design, look at a report that summarizes the key components of the design (such as number of samples, size of sampling area, cost, probabilities associated with the problem, assumptions, and technical justification), see a listing of the coordinates of each sampling location. For three dimensional sampling areas such as buildings and rooms, you can view a 3-D display of the entire building, and you can also toggle through individual rooms choosing from several ways to display the rooms. There also is an option which allows for displaying several of these views in different windows simultaneously. This section describes each of these views and discusses how you can use the views to assess the VSP sampling plan.

There are two ways to select/change views:


- Press one of the display buttons in the middle of the tool bar (**MAP VIEW, GRAPH VIEW, REPORT VIEW, COORDINATE VIEW, 3D VIEW**). **If you are working with rooms, the ROOM VIEW may also be used. The QUAD WINDOW button creates 4 separate windows for displaying multiple views simultaneously.**
- From the main menu select **View > Map** (or Graph, Report, Coordinate, Room, 3D)

### 4.1 Display of Sampling Design on the Map: MAP VIEW button or View > Map

In Section 2.2, we described how to set up a **Map**. In Section 2.3, we described how to set up a **Sample Area**. In Section 3.1, we described how to select a **Type of Sampling Plan**. In this section, we find out how to view the results of the sampling design we have just developed and displayed on the map.

In **Figure 4.1**, we see the display of a simple triangle we drew as our map and selected the entire triangle as our Sample Area. This is available in the file GridSize.vsp, which is included with the VSP program.

We then selected from the main menu **Sampling Goals > Locate Hot Spots > Assume no false negative errors**. We selected the Probability of Hit to be **90%** and selected a **Square** grid. We indicated that we wanted to detect a circular hot spot by selecting a **Shape** of **1.0** and a **Radius** of **4.0** feet. We press **Apply**, and when we return to the map (**View > Map**) we see the **22** samples VSP calculated as required to meet the sampling goal displayed. Each time we press **Apply**, we refresh the map display with a

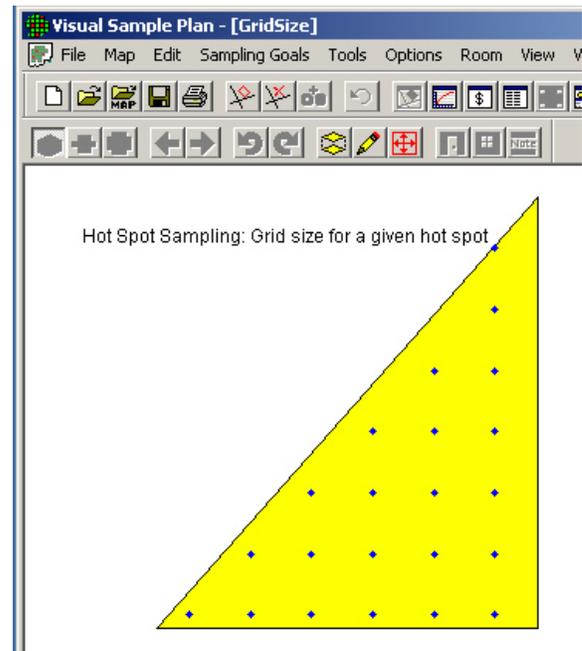

**Figure 4.1.** Display of Sampling Locations on Map

new set of random-start sampling locations.

## 4.2 Display of Cost of Design

In Section 5.4, we describe how to enter costs. For most sampling designs, Total Cost (per unit plus fixed costs) is tallied and displayed on the same screen where we enter the per-unit costs—under the **Costs** tab on the dialog box used for entering design parameters. Cost information is also usually available in the Report View (**View > Report**). Reports are discussed in detail in Section 4.4.

## 4.3 Display of Performance of Design: GRAPH VIEW button or View > Graph

VSP provides a display of the Performance of the Design for all of the sampling plans that result from sampling goals where a quantitative decision criterion is supplied. For some sampling goals where the only criterion the plan must meet is to minimize the variance of the estimate, minimize cost of the estimate, or to calculate a probability, there is little to graph in terms of the performance of the design. For such sampling goals, selecting **View > Graph** brings up a blank graph titled “**No Graph**”. For some designs, such as “Detect a Trend”, the Graph view will display a graph of actual data after it is entered into the Data Analysis page of the design dialog.


For the sampling goals that *do* specify decision error rates or have confidence bounds on the estimates, VSP provides a graph of the performance of the sampling design that has just been created. Each sampling goal, or problem type, has a performance display tailored to it. Each graph tries to show the relationship between some parameter of the sampling design and how effective that design is at achieving the decision criteria. Once a Sampling Goal has been selected, the DQO inputs are entered on the dialog box input screen, and the **Apply** button is pressed to apply the design to the Sample Area, the display of the performance can be seen by pressing the **GRAPH VIEW** button on the tool bar or selecting **View > Graph** from VSP’s main menu.

The following sections describe the major displays available for various types of problems. Displays not described are variants of those presented. Some of the graphs associated with unique sampling designs, such as Sequential Sampling, have been described in earlier sections, e.g., Graph View of Sequential Sampling (**Figure 3.8**), found in Chapter 3. Graphs for UXO-related Sampling Goals are discussed in Chapter 7.

### 4.3.1 Performance of Design for Sampling Goal: Compare Average to a Fixed Threshold

The display for the goal of comparing an average to a fixed threshold (i.e., the Action Level) is a graph of the probability of deciding the true mean of the sample area is greater than or equal to the Action Level on the vertical (y) axis as opposed to a range of possible true mean values on the horizontal (x) axis. **Figure 4.2** is the Decision Performance Goal Diagram (DPGD) described in EPA’s QA/G-4 guidance (EPA 2000a, pp. 6-7 – 6-11). The document can be downloaded from the EPA at: [http://www.epa.gov/quality/qa\\_docs.html](http://www.epa.gov/quality/qa_docs.html). Notice how the graph changes as we alternate the null hypothesis between “Assume Site Dirty” to “Assume Site Clean.”

The solid vertical red line is positioned at a true mean value of **10**, which corresponds to the Action Level. The area in gray hash marks is the gray region shown here from 8 to 10 and input as a delta (width) of **2**. The two dashed blue lines that extend from the y-axis to the x-axis mark the two types of decision error rates, alpha, set here at **5%**, and beta, set here at **10%**. Recall that Alpha is the probability of rejecting the null hypothesis when it is true (called a false rejection decision error), and beta is the probability of accepting the null hypothesis when it is false (called a false acceptance decision error). The error rates along with

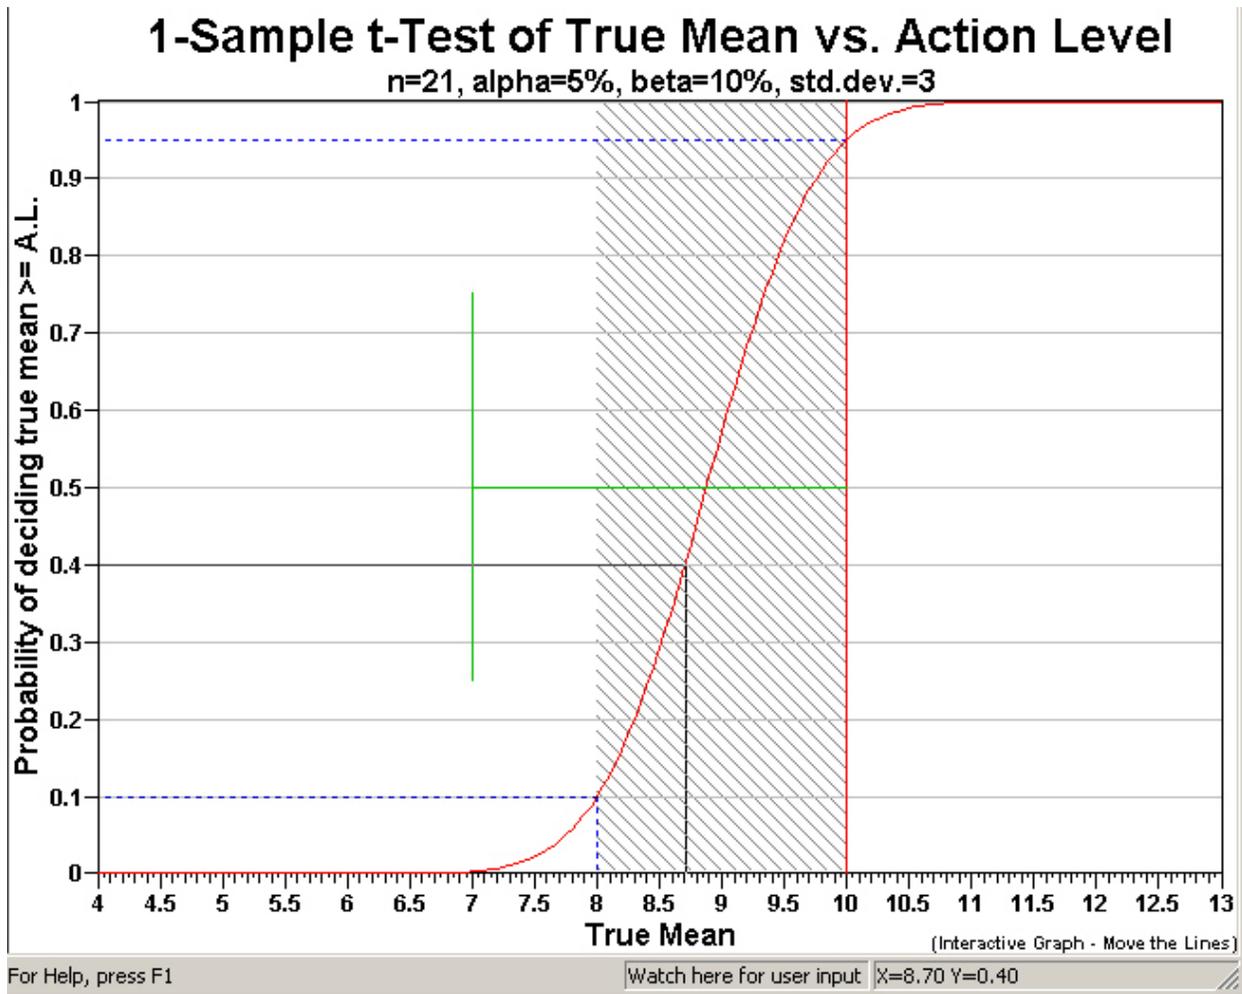

**Figure 4.2.** Decision Performance Goal Diagram for *Null Hypothesis: True Mean  $\geq$  Action Level* for Comparing Mean vs. Action Level

the user-supplied standard deviation of **3** and the VSP-calculated sample size  $n=21$  are shown on the second row of the title. We also see in the title that we are using the sample size formula for the one sample t-test.

The green vertical line marks off one standard deviation (3) from the action level. This mark allows the user to visually compare the width of the gray region to how variable, on average, we expect individual observations to be about the mean (definition of standard deviation). The sliding black lines (cross hairs) that move on the graph when the mouse is moved are provided to facilitate reading the x, y values off the

graph. This cross-hair feature can be turned off or on by choosing **Options > Graph > Display Cross Hairs**.

Most of the parameters displayed on the DPGD can be changed interactively by moving the lines on the graph, rather than having to change the values in the input dialog box. **Table 4.1** describes the interactive features.

As you change these parameters, you can see the new value of the parameter on the bottom status bar after “watch here for user input.” You will notice that changing these values on the graph also changes

**Table 4.1.** Interactive Graph Features

To Change	Do the Following
Alpha	Drag the horizontal blue dashed line up or down
Beta	Drag the horizontal blue dashed line up or down
Delta (and LBGR, or UBGR)	Drag the vertical edge of the shaded gray area to the left or right
Standard Deviation	Drag the vertical section of the green line left or right
Action Level	Drag the vertical red line left or right
Null Hypothesis	Click on the y-axis title

these values on the other displays: the sampling design is modified in the report view, new samples are placed on the map view, and updated sample location information is listed in the coordinate view.

Right-clicking anywhere in the graph brings up a pop-up menu. The options in the menu are described in **Table 4.2**. This pop-up menu provides quick access to the menu choices available from the main menu under **Options > Graph**. One of the options is to view the complement of the Decision Performance Goal Diagram, which is referred to as the “Operating Characteristic” Curve. We select this option and the OC curve is shown in **Figure 4.3**. Note that the Y-axis is now labeled, “Probability of making the correct decision”.


**Table 4.2.** Graph Options Menu Commands

Display Cost	Display cost on any graph axis that would otherwise display the number of samples.
Display Cross Hairs	Display an interactive cross-hair that allows the user to see the X and Y values for any point on the graph
Display Current Value	Displays a blue dashed cross-hair that corresponds to the current X and Y value produced by the current sampling design (applies only to certain designs).
Probability of Correct Decision	Displays the probability of a correct decision in place of a decision performance goal diagram
MQO Method Comparison	Displays a bar graph that shows the relative costs of MQO sampling design alternatives.
Barnard’s Log Likelihood Ratio	Displays a plot of Barnard’s Log Likelihood Ratio (which is the test statistic used in Barnard’s sequential t-Test)
Plot Linear Regression	Displays the linear regression plot (available for collaborative sampling designs).
Pick UXO Graph	Allows user to choose which saved power curve they wish to display in the report view.

When the null hypothesis is stated as  $H_0: \text{True Mean} \geq \text{Action Level}$  (Site is Dirty), the gray region is on the left side of the Action Level. However, when the null hypothesis is stated as  $H_0: \text{True Mean} \leq \text{Action Level}$  (Site is Clean), the gray region is on the right side of the Action Level. In practical terms, when we assume a site is dirty, the majority of the decision errors will occur for clean sites with true means just below the Action Level. On the other hand, when we assume a site is clean, the majority of decision errors will occur for dirty sites with true means just above the Action Level.

The DPGD graph in **Figure 4.3** is telling us that for the “Site is Dirty” null hypothesis,

- Very clean sites will almost always result in sets of random sampling data that lead to the decision “Site is Clean.”
- Very dirty sites will almost always result in sets of random sampling data that lead to the decision “Site is Dirty.”

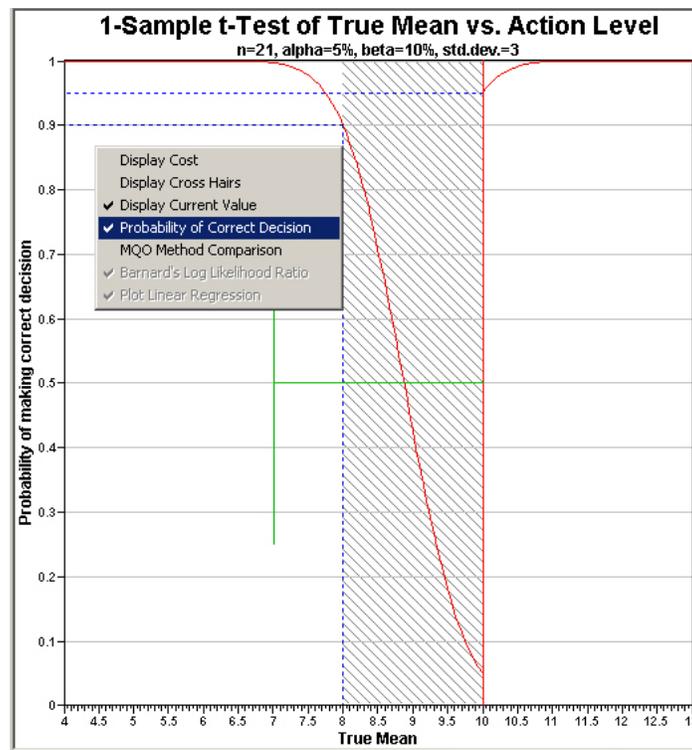


**Figure 4.3.** Graph of Probability of Making Correct Decision

What we may not know intuitively is how our choice of the null hypothesis affects decisions near the Action Level. The graph in **Figure 4.3** also is telling us

- Clean sites with true means just *below* the Action Level will lead to mostly *incorrect* decisions.
- Dirty sites with true means just *above* the Action Level will lead to mostly *correct* decisions.



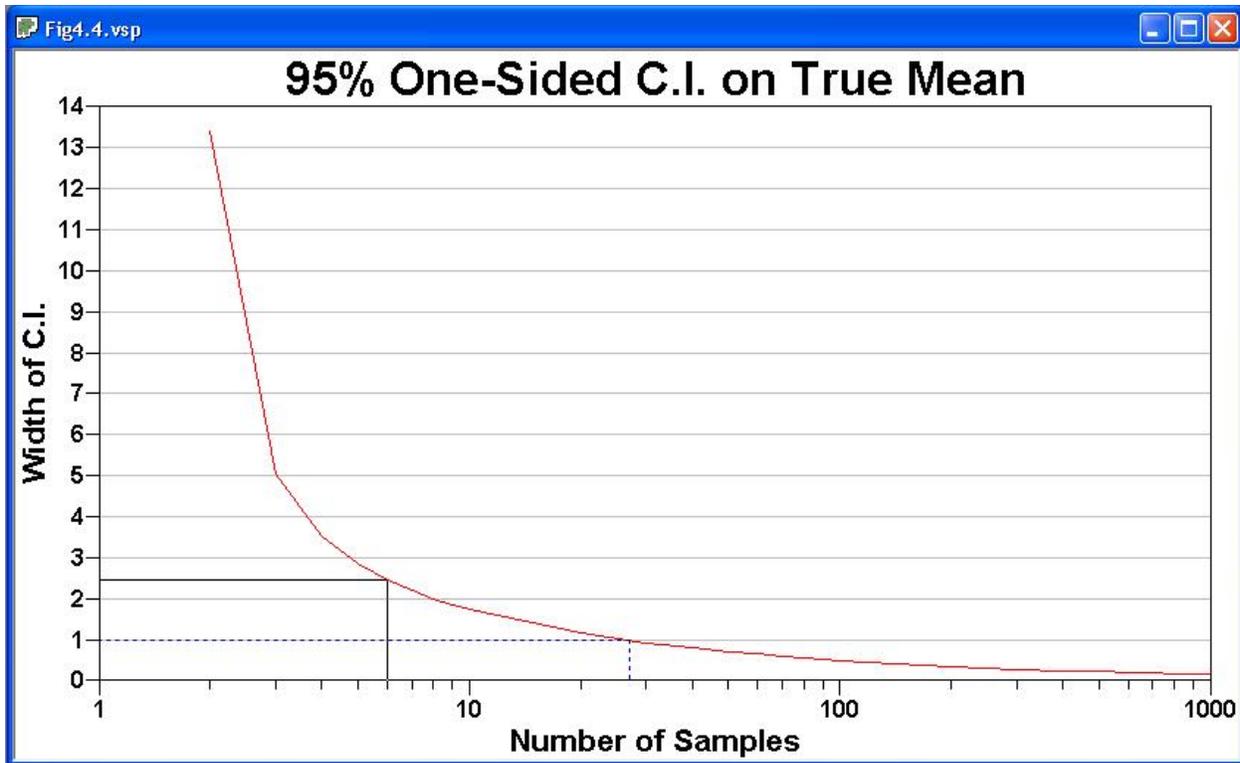

**Figure 4.5.** Decision Performance Graph for One-Sided 95% Confidence Interval

VSP calculated that a sample size of **27** was required. The performance graph is a plot of possible confidence interval widths vs. number of samples for the problem specified. The dashed blue line terminates at the y-axis at a confidence interval width of 1.0, as specified by the user, and at the x-axis at the recommended minimum sample size of 27.

The solid black line is a locating aid you can slide up and down the graph to easily read the trade-offs between increased width of the confidence interval and increased number of samples. In VSP, the x-axis value (number of samples) and the y-axis value (width of confidence interval) for the current solid black line are located in the status bar below the Graph view.


### 4.3.3 Performance of Design for Sampling Goal: Comparing a Proportion to a Fixed Threshold

The sampling design assessment display for comparing a proportion to a fixed threshold is a graph of the DPGD for the DQO inputs supplied. **Note:** If the appropriate statistical test is used, the test is designed to achieve the level of significance, or alpha. It is beta and the power of the test (1-beta) that are affected by sample size.

For this sampling goal, there is no clear distinction between “Site Dirty” and “Site Clean,” depending on how the null hypothesis is formulated. If the proportion we are talking about is the proportion of 1-acre lots in a building development that have trees, then exceeding a threshold would be a “good thing.” However, if the proportion is the proportion of acres that have contamination greater than 10 pCi, then exceeding the threshold would be a “bad thing.” Alpha and beta are still defined as false acceptance and false rejection rates, but the

user must formulate the hypotheses and select limits on the error rates consistent with the goals of the project and which type of error is most important to control.

In the example in **Figure 4.6**, the null hypothesis was set to **True Proportion  $\geq$  Given Proportion**. As such, beta is the probability of deciding the proportion exceeds the threshold when the true proportion is equal to or less than the lower bound of the gray region. For this problem, we set alpha to **1%** and beta to **5%**, and the lower bound of the gray region to **0.35 (i.e., width of gray region = 0.15)**. The proportion we want to test against (Action Level) is **0.5**. This Action Level is the most conservative. That is, the largest number of samples are needed to differentiate a proportion from 0.5 (vs. differentiate a proportion from any other percentage).

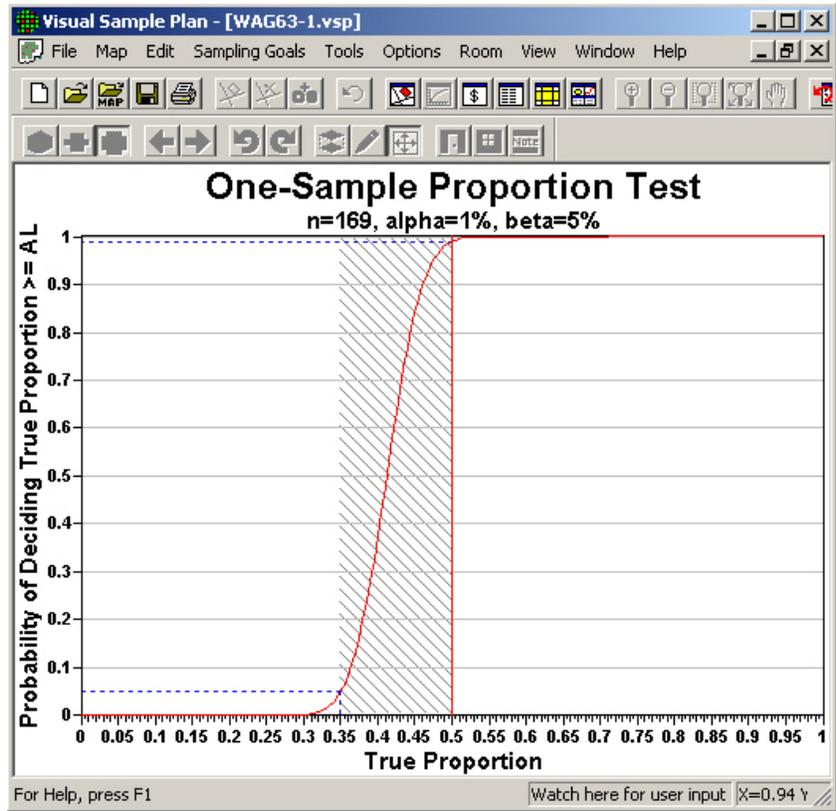


**Figure 4.6.** Decision Performance Goal Diagram for Comparing a Proportion to a Fixed Threshold

#### 4.3.4 Performance of Design for Sampling Goal: Compare Average to Reference Average

The sampling design performance display for comparing the true means of two populations when the **assumption of normality can be made** is a graph of the probability of deciding if the difference of true means is greater than or equal to the specified difference (Action Level) vs. various differences of true means. This graph is similar to the Decision Performance Goal Diagram discussed in Section 4.3.1, but this time we are dealing with two populations, and the x-axis is a range of possible *differences* between the two population means.

The graph shown in **Figure 4.7** is for **H<sub>0</sub>: Difference of True Means  $\geq$  Action Level**. We revert back to the notion that this null hypothesis implies a “Dirty Site” condition. If the action level is a positive number, we would classify the site as greater than background or “Dirty.” For this problem, the specified difference of the two means (Action Level) is **5**, the width of the gray region is **2**, alpha = **5%**, beta = **10%**, and the estimated common standard deviation = **3**.

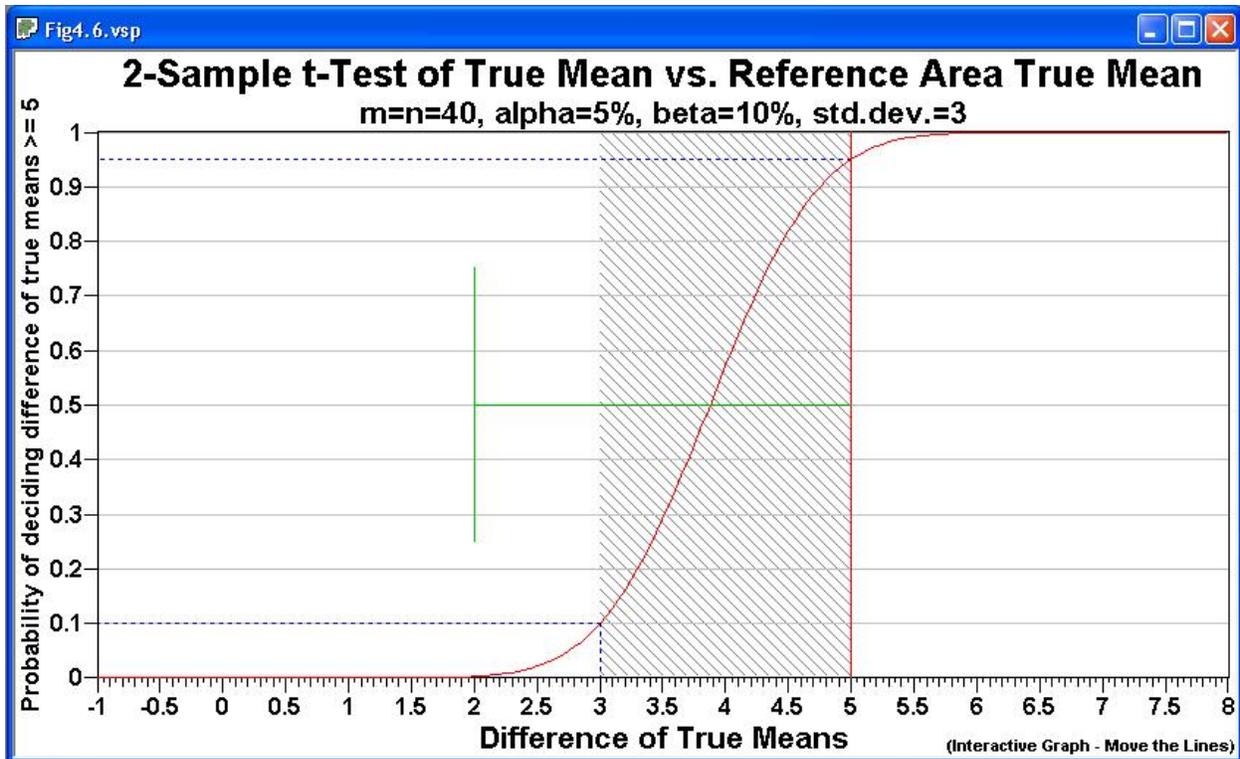


**Figure 4.7.** Decision Performance Goal Diagram for Comparing a Sample Area Mean to a Reference Area Mean

**Note:** The standard deviation is the average expected difference between the individual units in a population and the overall mean for that population. It is assumed that both populations (Sample Area and Reference Area) have the same standard deviation. The graph is labeled “2-Sample t-Test” because it is assumed that the two-sample t-test will be used as the statistical test.

The title of **Figure 4.7** shows that we need to take 40 samples both in the Sample Area and 40 samples in the Reference Area. The probabilities of deciding the Sample Area is 5 or more units (pCi/g, ppm, etc.) above the Reference area are plotted against the true differences in means. The standard deviation is shown as the green line at a distance of 3 from the Action Level.

When the assumption **data are not required to be normally distributed** is made, we can see from the pull-down menu lists under Sampling Goals that a non-parametric statistical test is proposed – the MARSSIM WRS (Wilcoxon rank sum) test.

The Decision Performance Goal Diagrams for the MARSSIM WRS is similar to the DPGD for the parametric two-sample t-test. In **Figure 4.8**, we see the DPGD for the MARSSIM WRS test using the same inputs as the problem in **Figure 4.7**. The difference of true means or medians is plotted on the x-axis, and the probability of deciding the difference is equal to or greater than the action level of 5 is shown on the y-axis. For the MARSSIM formulation of the WRS test, the action level is the Derived Concentration Guideline Level for average concentrations over a wide area (DCGLw). The lower bound of the gray region is the difference in means or medians where we want to limit the beta error.

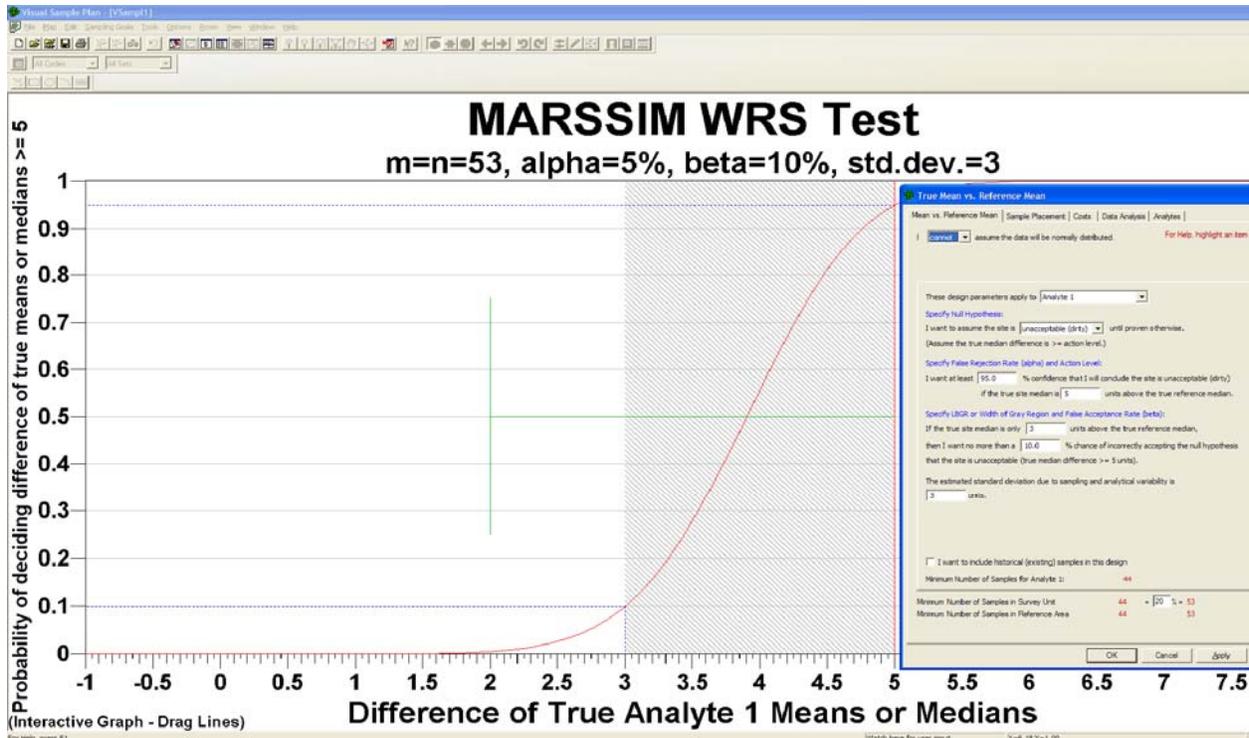

**Figure 4.8.** Decision Performance Graph for Comparing a Sample Area Mean to a Reference Area Mean (Nonparametric Version, MARSSIM WRS)

Shown in **Figure 4.8**, the input dialog for the MARSSIM WRS test allows the user to supply a percent overage to apply to the sample size calculation. MARSSIM suggests that the number of samples should be increased by at least 20% to account for missing or unusable data and for uncertainty in the calculated values of the Sample Size,  $n$ . With the extra 20%, the sample size now becomes 53 samples required in both the Sample Area (i.e., Survey Unit or Study Area) and Reference Area.

### 4.3.5 Performance of Design for Sampling Goal for Hot Spot Problem

The Decision Performance Goal Diagram for the hot spot problem is a graph of number of samples on the x-axis and the probability of hitting a hot spot of a specified size on the y-axis. The heading of the performance graph lists the size of the hot spot and the size of the sample area. The trade-off displayed is that by increasing the number of samples (i.e., a tighter grid spacing and hence the higher cost), and/or changing the grid type (say from square to triangular), there is a higher probability of hitting the hot spot with one of the nodes on the grid. This is almost a straight-line relationship until we get into larger sample sizes, and then the efficiency is diminished.

Returning to the problem we laid out in Section 4.1, for the sampling goal of **Sampling Goals > Locating a Hot Spot > Assume no false negative errors**, the graph is shown in **Figure 4.9**. This graph is for the 1130.84 ft<sup>2</sup> Sample Area shown in **Figure 4.1** and for finding a 4-ft round hot spot. The graph shows the desired input of 90% probability of hitting the circular hot spot of radius 4 ft. and the 22 samples required to achieve this. The DPGD for this problem is a graph of the % probability of a hit on the Y axis vs. the number of samples using a square grid on the X axis. The user can move the cursor along the curve to read off alternative combinations of probability of a hit for different samples sizes (i.e., grid size).

VSP may place a slightly different number of sampling points (nodes) on a map than the exact number calculated. The difference between the calculated number of samples and the number of samples placed on the map is 1) grid edge effects, 2) adding judgment samples, or 3) selecting or unselecting sample areas. Repeatedly pressing the **Apply** button from the dialog box will select a different random starting point for the grid and may change the number of samples that will fit in the sample area.

The probability of hit is a geometric relationship between the grid spacing and the hot spot size and shape. The probability of hit is *not* a function of number of samples. On the graph,


however, grid spacing is translated to the number of samples on a *theoretical* sampling area. The number of theoretical samples is shown on the graph because it is a more meaningful metric for the user than grid spacing. The dashed blue line on the performance curve shows the number of samples that fit on the *actual* sample area given the starting point. The report also lists the actual number of samples placed on the map.

**Important note:** Regardless of where the dashed blue line occurs on the graph, the probability of a hit for *your* sampling design is the one you specified and is shown on the sampling goal dialog. This is true because the probability of a hit is a geometric relationship between the grid spacing and the hot spot size and shape.

Deselecting the Random Start on the dialog box removes the random assignment of the grid and keeps the grid fixed with each repeated hit of the Apply button, keeping the same sample size.

#### 4.3.6 Performance of Design for Sampling Goal of Compare Proportion to a Reference Proportion

The graph for displaying the performance of the design for comparing a proportion to a reference proportion is similar to the comparison of two population means (see **Figure 4.7**). As such, the difference between the two true proportions is shown on the x-axis, and the probability of deciding that the difference between the two true proportions is greater than a specified difference (i.e., the Action Level) is shown on the y-axis. The two proportions being compared could be, say, the proportion of children with elevated blood lead in one area compared to the proportion in another area, or it could be the percentage of 1-m squares within an acre that have contamination greater than 1 ppm of dioxin. The comparison might be to

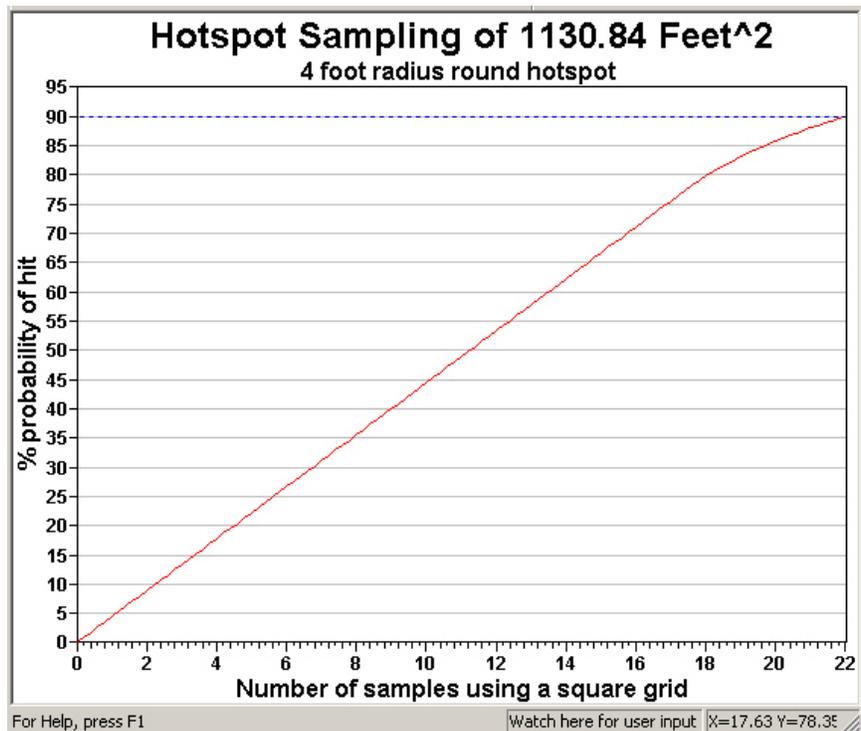


**Figure 4.9.** Probability of Hitting a Hot Spot vs. Number of Samples

compare the amount of contamination (stated as a percentage remaining at a site after it has been remediated) to a background or reference area. Using the naming convention in EPA (2000b, pp. 3-27 – 3-31), the site (also called the survey unit, Sample Area) is Area 1, and the reference or background area is Area 2. The document can be downloaded from the EPA site: [http://www.epa.gov/quality/qa\\_docs.html](http://www.epa.gov/quality/qa_docs.html).

In **Figure 4.10**, we see the inputs from the dialog box along with the Decision Performance Goal Diagram. The example has as the null hypothesis “no difference between site and background,” or  $H_0: P1 - P2 \leq 0$ . The two estimated proportions are required to calculate the standard deviation for the pooled proportion used in the sample size formula. With this formulation, the specified difference (Action Level) is 0, and the false acceptance error rate (beta = 5%) is set at the difference of  $P1 - P2 = 0.10$ . Thus, 0.10 is the upper bound of the gray region, which VSP requires to be greater than the Action Level. When the null hypothesis is changed to Difference of Proportions  $\geq$  Specified Difference, the lower bound of the gray region is less than the action level.

The graph in **Figure 4.10**, labeled the Two-Sample Proportion Test, lists the inputs of alpha, beta, and the two estimated proportions in the heading line. The S-shaped curve shows that for larger differences in the true proportions, the probability of correctly deciding the difference exceeds the Action Level increases. This is intuitive because the greater the difference between two populations, the easier it is to correctly distinguish that difference from a fixed threshold (Action Level).

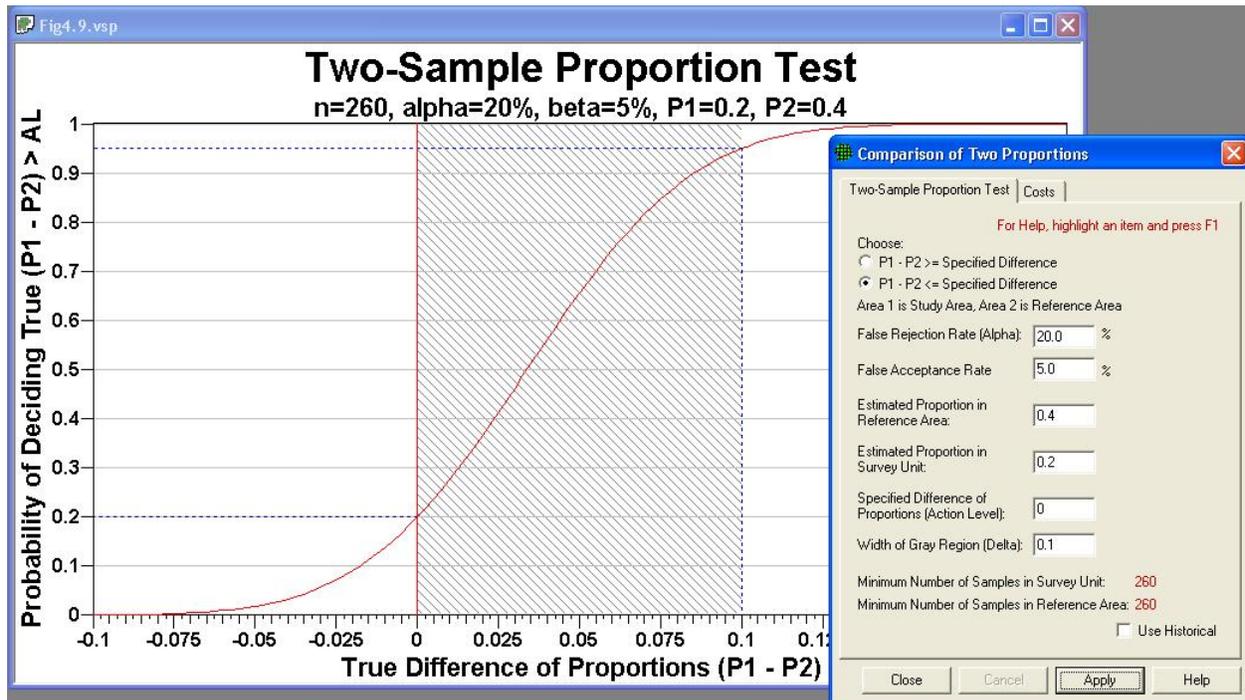


**Figure 4.10.** Decision Performance Goal Diagram for Comparing a Sample Area Proportion to a Reference Area Proportion. Input dialog box for design shown as insert.

### 4.3.7 Performance of Design for Sampling Goal of Establish Boundary of Contamination

In **Figure 4.11** we see the performance of the sampling design defined by the inputs shown in **Figure 3.36** applied to the Sample Area of the large “oval” in the Millsite.dxf file (see Map View in **Figure 3.38**). This problem is for the **Enclosing Boundary**. In order to have a **95%** confidence of finding a hot spot of diameter of **45 ft**, we need **12** segments. This dictates we need **60** Primary Sampling Locations ( $12 \times 5 = 60$ ). The relationship between diameter of hot spot and number of primary sampling locations is shown in the dashed blue line positioned on the performance curve shown in **Figure 4.11**. The dashed line shows the current number of Primary Sampling Locations for this design ( $n = 60$ ), which may differ from the optimum number because of rounding and bump-out effects. We can see from the cross hairs positioned on the performance curve (right-click on graph, and toggle the **Display Cross Hairs** to “on”), that if we expand our Primary Sampling Locations to 100, we could detect a hotspot of diameter 27 ft. with the sample level of 95% confidence.

The sample type of graph is produced for the **Open Boundary** Sampling Problem.

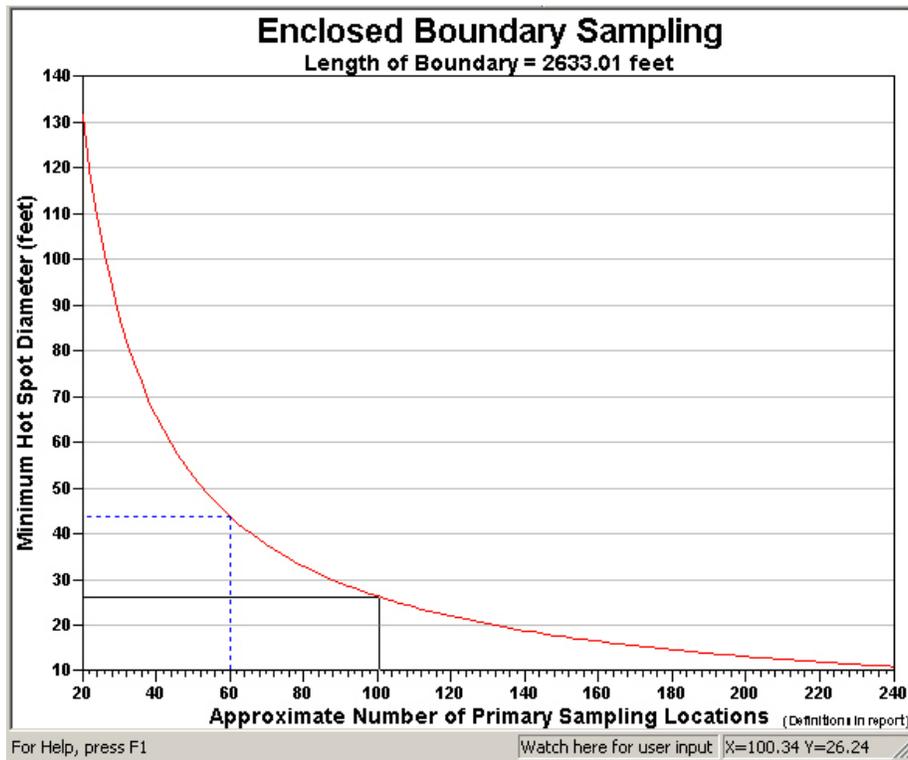

**Figure 4.11.** Curve of Trade-off Between Primary Sampling Locations and Size of Hot Spot that can be Detected

## 4.4 Display of the Report

One of the most valuable outputs from VSP is the Report that is generated for each application of a Sampling Design to a Sample Area. The Report View for a sampling design is available by either selecting the **REPORT VIEW** button on the toolbar, or by selecting **View > Report** from the main menu. The only Sampling Goals that do not produce Reports are **Non-statistical sampling approaches** and **Comparisons of two proportions**.

The Report provides the VSP user with a complete documentation of the sampling design selected. The report includes:

- statement of sampling objective,
- the assumptions of the design,
- sample size formula,
- inputs provided by the user,
- summary of VSP outputs including sample size and costs,
- list of samples with their coordinates and labels,
- map with sample locations identified,
- Performance Goal Diagram,
- Peer-reviewed technical references for designs and formulas,
- technical discussion of the statistical theory supporting the sampling design and sample size formula.

The reports are suitable for incorporation into a quality assurance project plan or a sampling and analysis plan. The report for some of the sampling designs include:

- recommended data analysis activities for how data should be used in the appropriate statistical test to make a decision,
- insight into options presented in the Input Dialog Box,
- sensitivity tables showing how sample number changes as input parameters change, and
- extended statistical discussions and support equations.

Some of the output from VSP, for some designs, is viewable only within the report. VSP users can use the information in the **Report** as an additional source of **Help**.

A few selections from the report for the selection **Sampling Goals > Compare Average to a fixed threshold**, with **can assume the data will be normally distributed** and **ordinary sampling** selected, are shown in **Figure 4.12**. Each time VSP calculates a new sample size, changes VSP input, or adds points to an existing design, the report is updated automatically. The complete report can be copied to the clipboard for pasting into a word processing application like Microsoft Word by selecting **Edit > Copy** from the main menu when the report view is active. The text and graphics are copied using rich text format (RTF) to preserve formatting. The user opens Microsoft Word, selects **Paste**, and the entire report is copied into a Word document.

The sensitivity table in the **Report View** allows the user to do “what-if” scenarios with VSP input and output. For the sampling problem shown in **Figure 4.12**, the sensitivity table shows how sample size changes with changes in the standard deviation and the two decision error rates, alpha and beta. Different sampling goals and sets of assumptions have different variables and parameters in their sensitivity table. The user can change the variables and range of values shown in the sensitivity table by right-clicking anywhere in the report.

**Random sampling locations for comparing a mean with a fixed threshold (parametric)**

**Summary**

This report summarizes the sampling design used, associated statistical assumptions, as well as general guidelines for conducting post-sampling data analysis. Sampling plan components presented here include how many sampling locations to choose and where within the sampling area to collect those samples. The type of medium to sample (i.e., soil, groundwater, etc.) and how to analyze the samples (in-situ, fixed laboratory, etc.) are addressed in other sections of the sampling plan.

The following table summarizes the sampling design developed. A figure that shows sampling locations in the field and a table that lists sampling location coordinates are also provided below.


SUMMARY OF SAMPLING DESIGN	
Primary Objective of Design	Compare a site mean to a fixed threshold
Type of Sampling Design	Parametric
Sample Placement (Location) in the Field	Simple random sampling
Working (Null) Hypothesis	The mean value at the site exceeds the threshold
Formula for calculating number of sampling locations	Student's t-test
Calculated total number of samples	37
Number of samples on map <sup>a</sup>	37
Number of selected sample areas <sup>b</sup>	1
Specified sampling area <sup>c</sup>	509779.78 ft <sup>2</sup>
Total cost of sampling <sup>d</sup>	\$19500.00

<sup>a</sup> This number may differ from the calculated number because of 1) grid edge effects, 2) adding judgment samples, or 3) selecting or unselecting sample areas.

<sup>b</sup> The number of selected sample areas is the number of colored areas on the map of the site. These sample areas contain the locations where samples are collected.

<sup>c</sup> The sampling area is the total surface area of the selected colored sample areas on the map of the site.

<sup>d</sup> Including measurement analyses and fixed overhead costs. See the Cost of Sampling section for an explanation of the costs presented here.

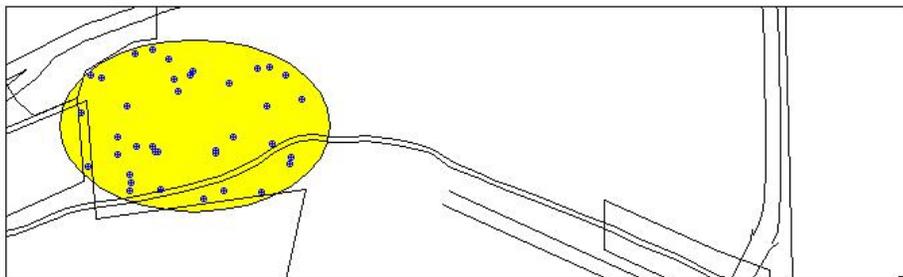


Area: Area 1					
X Coord	Y Coord	Label	Value	Type	Historical
2265128.4318	10285981.0061		0	Random	
2265305.4734	10285630.1118		0	Random	
2265161.3618	10285860.6159		0	Random	
2265563.9628	10285920.1073		0	Random	

**Figure 4.12.** Report View of the Sampling Goal: Compare Average to a Fixed Threshold, Normality Assumed, Ordinary Sampling

A dialog box, as shown in **Figure 4.13**, is displayed to allow the user to choose which of up to four variables will be displayed in the sensitivity table, along with each variable's starting and ending value, and the step-size. Shown in red are the values the variables will take.

**Figure 4.14** shows the sensitivity table that will be included in the Report (**View > Report**). Displayed in the table can be the number or samples, cost, or both. Certain sampling designs have the option to show parameters other than cost.

The Report changes based on the Sampling Goal selected. **Figures 4.15** and **4.16** show portions of the Report for the sampling goal of **Sampling within a Building**. Shown are the two sampling areas: rooms in yellow are Sampling Room 1; rooms in darker yellow are Sampling Room 2, which is also the **Current Room**. In **Figure 4.16** we also see the detail on the samples placed within the two rooms, along with their actual and relative coordinates, type of sample, and whether the sample is placed on the floor, ceiling, walls, or windows and doors.

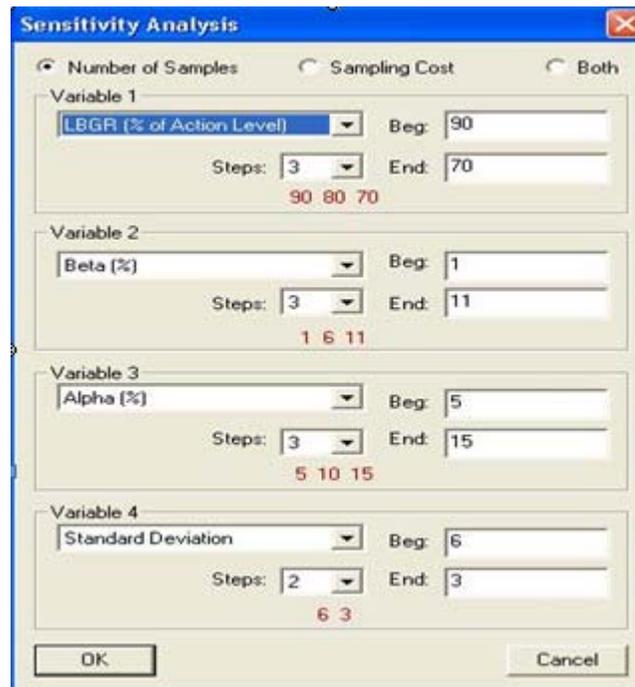

**Figure 4.13.** Dialog Box for Changing Variables Displayed, and Range for Variables Shown, in Sensitivity Table in Report View. Shown here is input dialog for sampling goal of compare average to threshold, normality assumed (parametric), ordinary sampling.

**Sensitivity Analysis**

The sensitivity of the calculation of number of samples was explored by varying  $s$ , LBGR,  $\beta$  and  $\alpha$  and examining the resulting changes in the number of samples. The following table shows the results of this analysis.

Number of Samples							
AL=10		$\alpha=5$		$\alpha=10$		$\alpha=15$	
		$s=6$	$s=3$	$s=6$	$s=3$	$s=6$	$s=3$
LBGR=90	$\beta=1$	570	144	470	118	408	103
	$\beta=6$	370	94	291	74	243	61
	$\beta=11$	299	76	228	58	185	47
LBGR=80	$\beta=1$	144	37	118	31	103	26
	$\beta=6$	94	25	74	19	61	16
	$\beta=11$	76	20	58	15	47	13
LBGR=70	$\beta=1$	65	18	53	14	46	12
	$\beta=6$	43	12	34	9	28	8
	$\beta=11$	35	10	26	8	22	6

$s$  = Standard Deviation

LBGR = Lower Bound of Gray Region (% of Action Level)

$\beta$  = Beta (%), Probability of mistakenly concluding that  $\mu >$  action level

$\alpha$  = Alpha (%), Probability of mistakenly concluding that  $\mu <$  action level


AL = Action Level (Threshold)

**Cost of Sampling**


The total cost of the completed sampling program depends on several cost inputs, some of which are fixed, and others that are based on the number of samples collected and measured. Based on the numbers of samples determined above, the estimated total cost of sampling and analysis at this site is \$19500.00, which averages out to a per sample cost of \$527.03. The following table summarizes the inputs and resulting cost estimates.

COST INFORMATION			
Cost Details	Per Analysis	Per Sample	37 Samples
Field collection costs		\$100.00	\$3700.00
Analytical costs	\$400.00	\$400.00	\$14800.00
<b>Sum of Field &amp; Analytical costs</b>		<b>\$500.00</b>	<b>\$18500.00</b>
Fixed planning and validation costs			\$1000.00
<b>Total cost</b>			<b>\$19500.00</b>

**Figure 4.14.** Sensitivity Table for Sampling Goal: Compare Average to a Fixed Threshold, Normality Assumed, Ordinary Sampling. Cost information shown in bottom of figure.

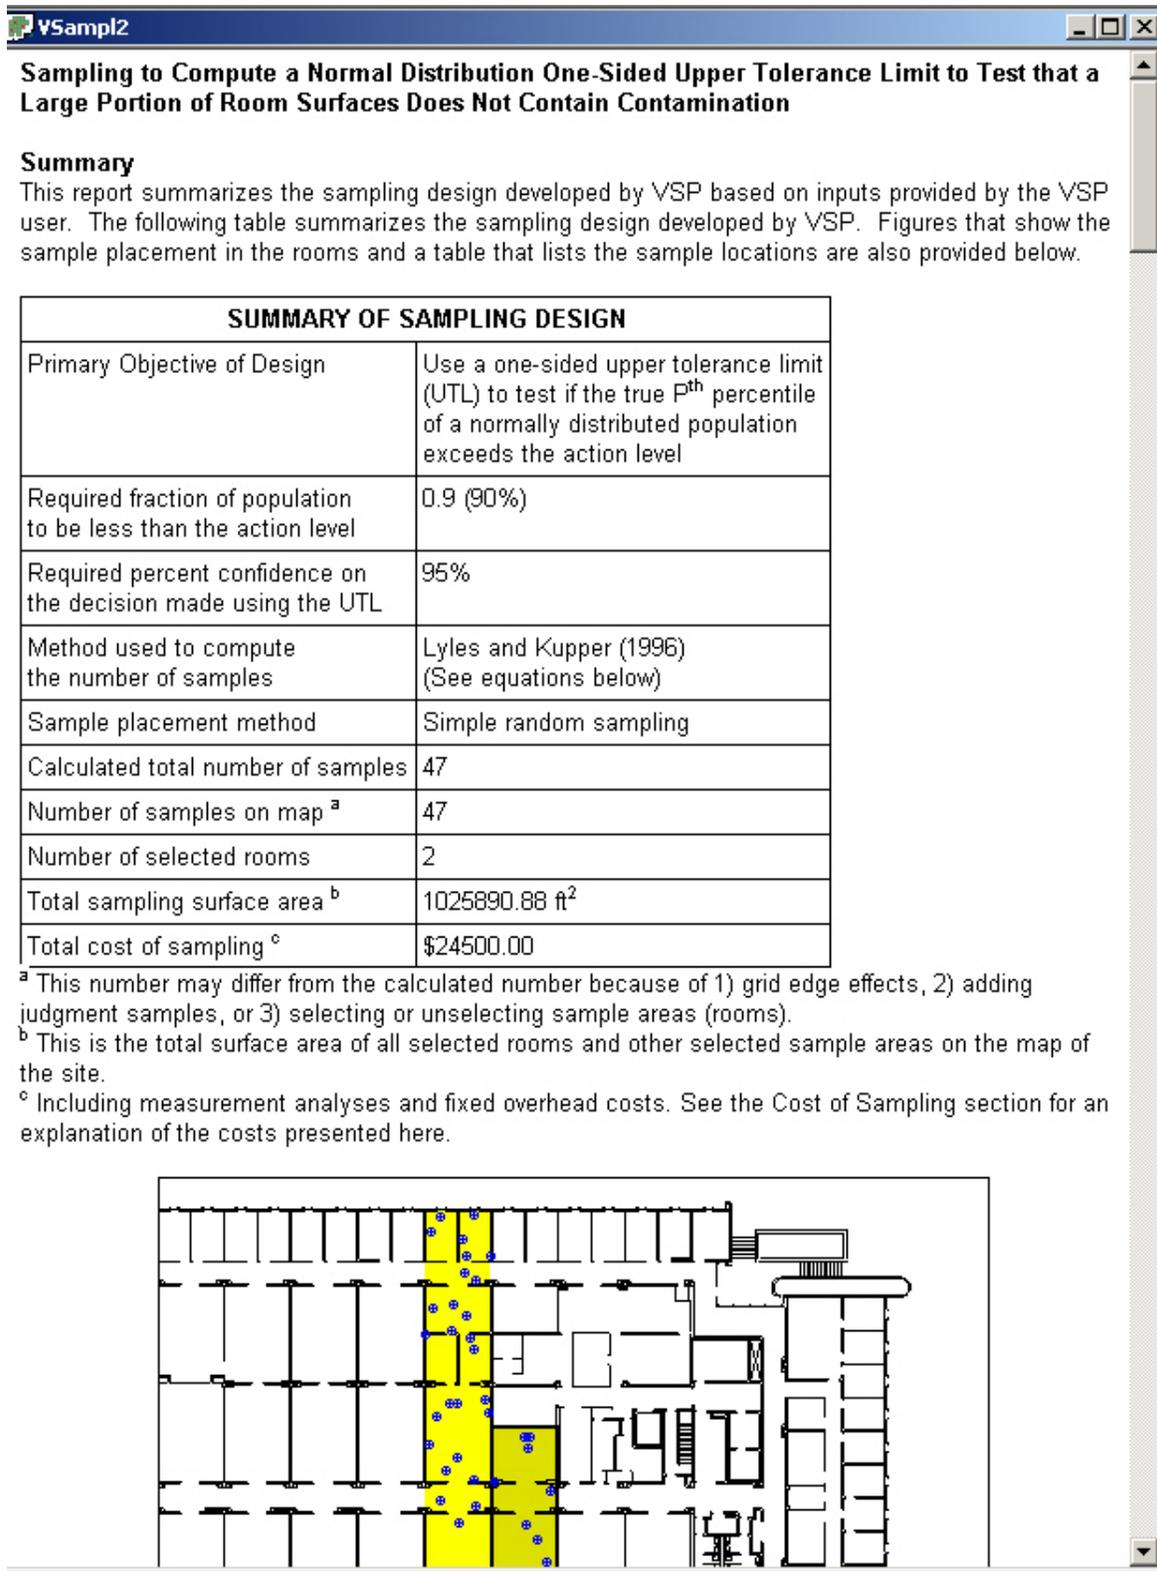

**Figure 4.15.** Report View for Sampling within a Building. Shown are summary information for design and location of samples areas selected within the floor plan.

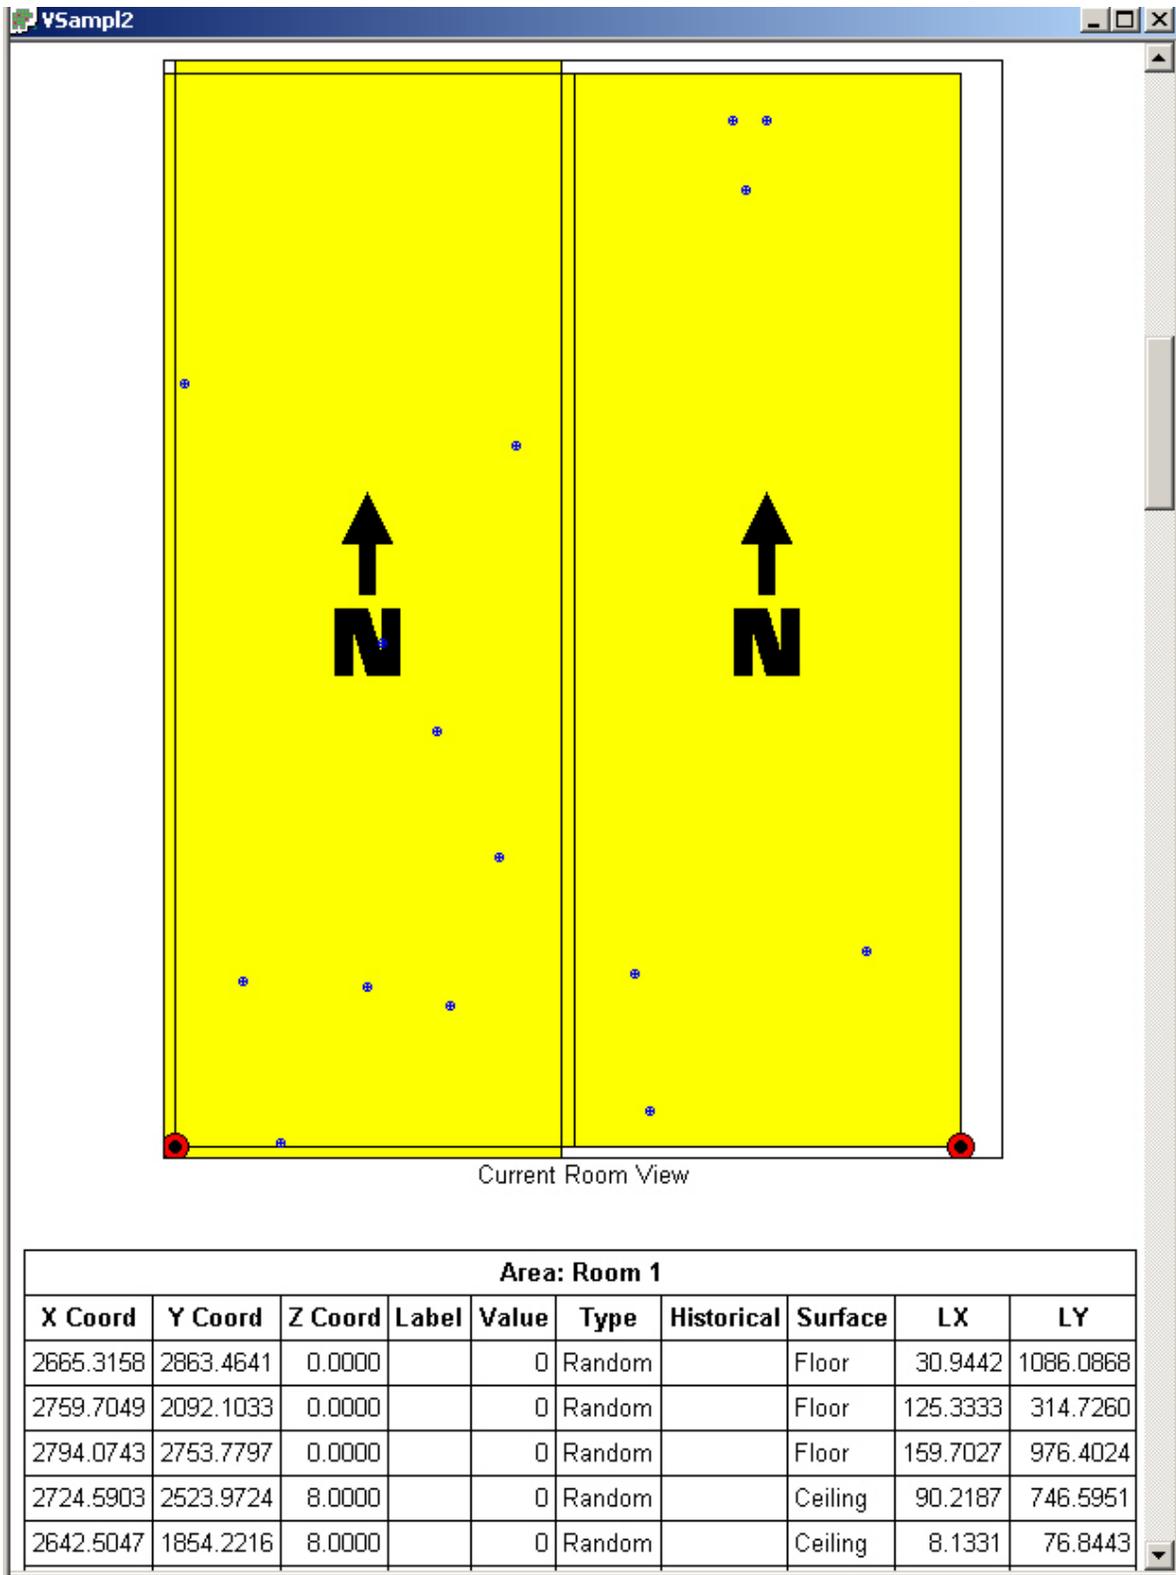

**Figure 4.16.** Report View for Sampling within a Building. Shown are current room, and sample information.

## 4.5 Display of Coordinates

The fourth type of display in VSP is the list of coordinates for each sample point on the map. We can see this display by using the **COORDINATE VIEW** button on the toolbar, or by selecting Main Menu option **View > Coordinates**. The x and y coordinates are displayed for each sample point. Also displayed are the sample points label, a value (if entered by the user), the type (e.g., random, systematic, RSS), and a “true/false” indicator of whether or not this sample point is a historical sample (previously taken sample). Coordinates are segregated by Sample Area. These coordinates can be copied and pasted into a spreadsheet or word processing file using Main Menu option **Edit > Copy**. **Figure 4.17** is an example of the Coordinates view. It should also be noted that for modules with a **Data Entry** tab, some of this information can also be viewed there. Additionally, the analytical modules under **Sampling Goals > Find Target Areas and Analyze Survey Results (UXO)** have a **Data Entry and Analysis** tab used for exporting coordinates to be edited outside of VSP (see Chapter 7), and the coordinates are not displayed in the COORDINATE VIEW due to these datasets often being large. If searching for target areas, we don’t display the coordinates. See Chapter 7 for more information.

<u>Area: Area 1</u>					
<u>X Coord</u>	<u>Y Coord</u>	<u>Label</u>	<u>Value</u>	<u>Type</u>	<u>Historical</u>
2265128.4318	10285981.0061	VSP-1	0	Random	
2265305.4734	10285630.1118	VSP-2	0	Random	
2265161.3618	10285860.6159	VSP-3	0	Random	
2265563.9628	10285920.1073	VSP-4	0	Random	
2265578.9547	10285591.6967	VSP-5	0	Random	
2264986.3670	10285519.3750	VSP-6	0	Random	
2265259.0015	10285457.0271	VSP-7	0	Random	
2265149.0585	10285908.0085	VSP-8	0	Random	
2264934.5577	10285689.4339	VSP-9	0	Random	
2264825.5277	10285581.4322	VSP-10	0	Random	
2265206.7974	10285920.6213	VSP-11	0	Random	
2264979.1298	10285547.6926	VSP-12	0	Random	
2265004.4190	10285655.0953	VSP-13	0	Random	
2265492.7605	10285807.0948	VSP-14	0	Random	
2265301.9146	10285639.4444	VSP-15	0	Random	
2264833.7042	10285919.5649	VSP-16	0	Random	
2265476.4405	10285483.6637	VSP-17	0	Random	
2265625.4932	10285831.6183	VSP-18	0	Random	
2265068.7330	10285656.2455	VSP-19	0	Random	
2264936.0599	10285623.3110	VSP-20	0	Random	
2265514.4665	10285663.3566	VSP-21	0	Random	
2265458.2032	10285945.5990	VSP-22	0	Random	
2265066.2328	10286016.7997	VSP-23	0	Random	
2265085.2622	10285636.6912	VSP-24	0	Random	
2264799.7844	10285778.3154	VSP-25	0	Random	
2265505.2629	10285953.7490	VSP-26	0	Random	
2265218.2016	10285936.4287	VSP-27	0	Random	
2265369.7326	10285690.3660	VSP-28	0	Random	
2265075.2469	10285634.8206	VSP-29	0	Random	
2265003.4862	10286002.0137	VSP-30	0	Random	
2265352.9186	10285889.5687	VSP-31	0	Random	
2264877.7457	10285910.0798	VSP-32	0	Random	
2264973.4826	10285804.1923	VSP-33	0	Random	
2265584.5676	10285612.5624	VSP-34	0	Random	
2265334.9627	10285491.0034	VSP-35	0	Random	
2265096.8930	10285495.7522	VSP-36	0	Random	
2264983.5288	10285491.0735	VSP-37	0	Random	

**Figure 4.17.** Coordinates Display of Sampling Locations


## 4.6 Multiple Displays

Multiple displays can be brought up on the same screen. **Table 4.3** lists the options available under the main menu item **Window**.

**Table 4.3.** Window Menu Commands


New Window	Creates a new window that views the same project
Cascade	Arranges windows in an overlapped fashion
Tile	Arranges windows in non-overlapped tiles.
Arrange Icons	Arranges icons of closed windows
Double Window	Shows map view and graph view
Triple Window	Shows map, graph, and report views
Quad Window	Shows map, graph, report, and coordinate views

The user can select the **QUAD WINDOW** button from the toolbar for a quick way to display the Quad Window. **Figure 4.18** shows the results of the **Quad Window** option.

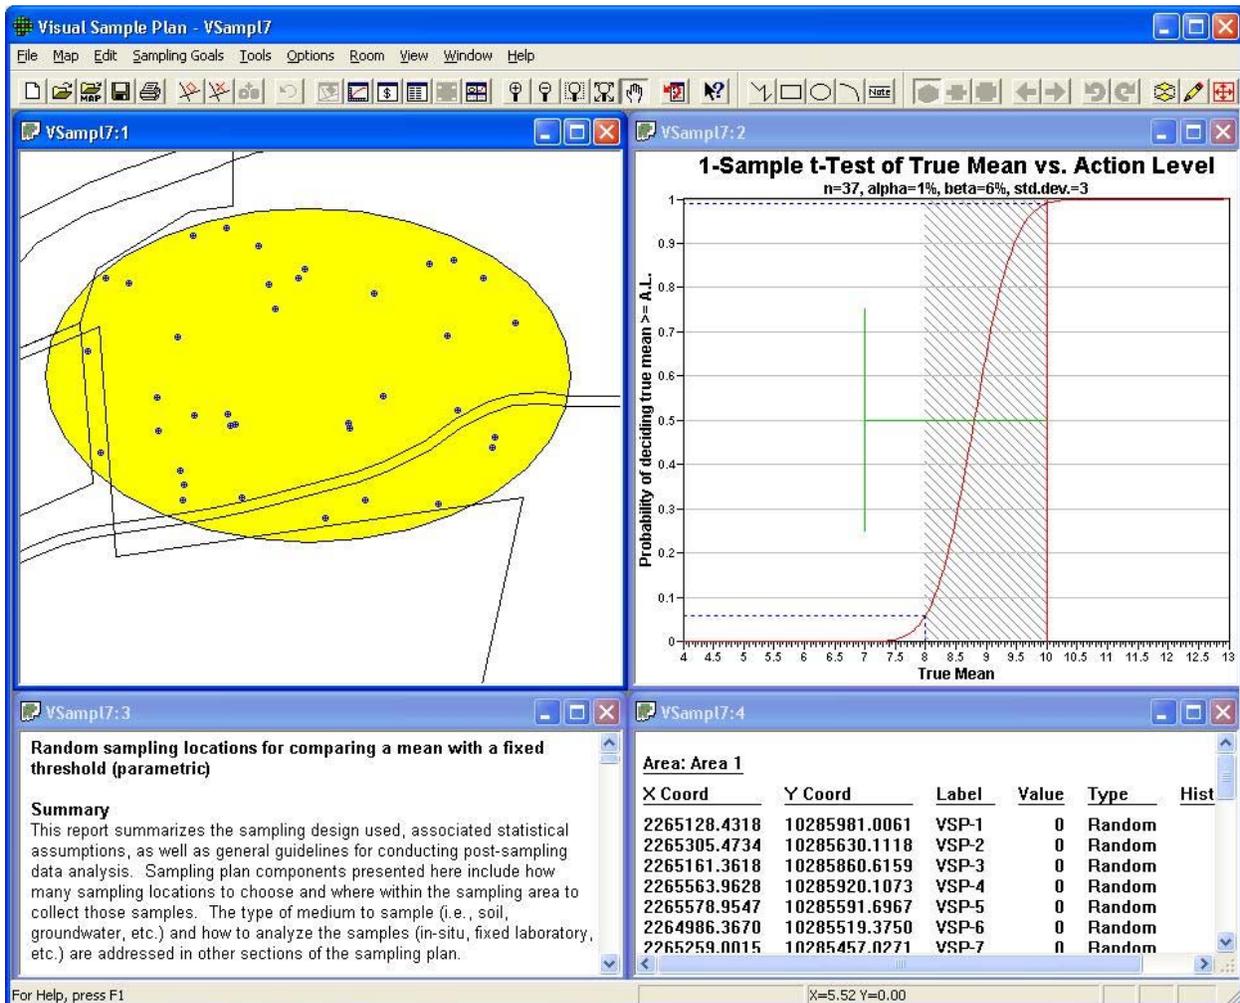

**Figure 4.18.** Quad Display of Map, Graph, Report, and Coordinates on Same Screen



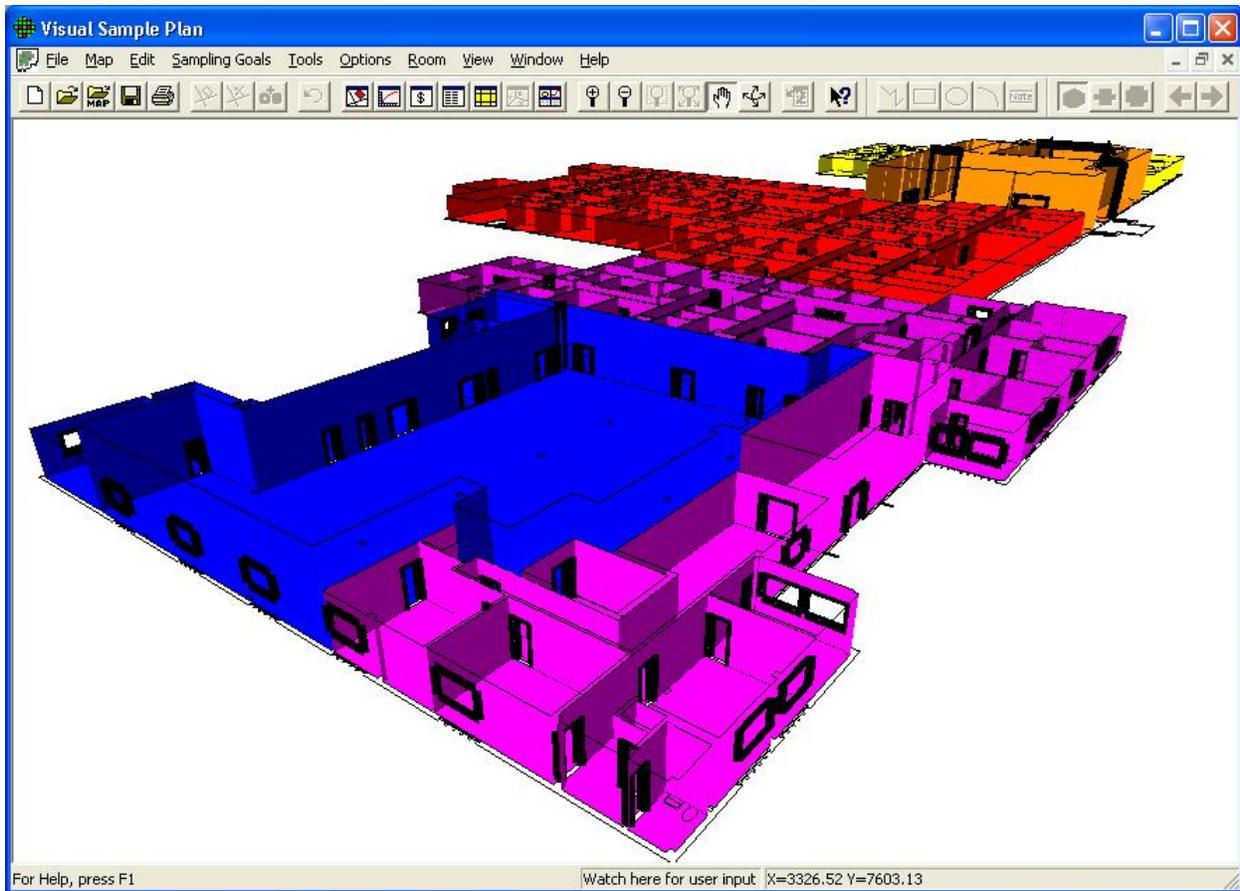

**Figure 4.20** 3D View with many rooms

For navigation, the 3D View uses three of the tools used by the Map View (Zoom In, Zoom Out and Pan). It also introduces a new navigation tool: the Rotate / Tilt tool.

When using the Rotate / Tilt tool (**View > Rotate** on the menu), the cursor becomes a double-ended curved arrow. If you move the cursor to the left edge of view, the tool becomes a Tilt tool. Press and hold the left mouse button while moving the cursor up or down to tilt the view. If you move the cursor away from the left edge of the view, the tool becomes a Rotate tool. Press and hold the left mouse button while moving the cursor around to rotate the view. If the map contains rooms, the view rotates around your point of view (to facilitate navigating through buildings), otherwise the view rotates around the center of the view.